


Instruction includes methods of montage:

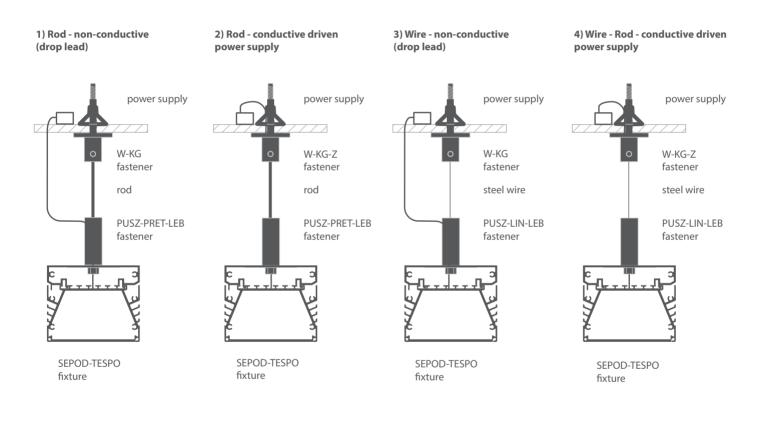

Tools needed for mounting:

- drill
- pliers
- allen wrench
- soldering iron

NOTE! All LED strips must be connected to a 12 V or 24 V power supply.

IMPORTANT: The manual presents the simplest mounting procedure. More mounting procedures and related accessories can be found at klusdesign.eu




SEPOD and TESPO - suspended fixture mounting instructions 2. Rod - conductive driven power supply

*If fully built fixtures are ordered and received from KLUS please skip to #3


cross-section

1. Drill the holes in both extrusion and the mounting track to mount the fasteners and lead the powering cables. 2 holes in the mounting track and 1 in the extrusion

2. Mount the LED strip in the extrusion and lead the cable through a pre-drilled hole

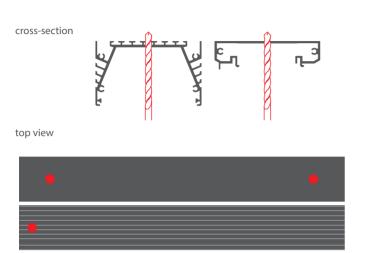


bottom view



3. Install the PUSZ-PRET-LEB fasteners with rods on the mounting track and join the extrusion and mounting track with the use of BLOK springs. One pole of power should be connected to a single fastener Both fastener and SEPOD extrusion installation manuals can be downloaded at www.klusdesign.eu.

side view cross-section


5. Install the W-KG-Z ceiling fasteners. The fastener installation manual can be downloaded at www.klusdesign.eu. Connect the cables, each for the single power pole to the fasteners. The cables should go through a pre-drilled hole just under the masking cover of the fastener.

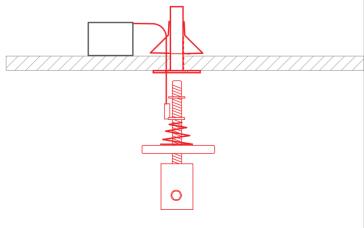

4. Install the cover and both end caps.

x2 0 0 x2 0 0 0 0


6. Mount the fixture with rods into the ceiling fasteners. Connect the cable to the power supplier, leading it through a pre-drilled hole in the ceiling.

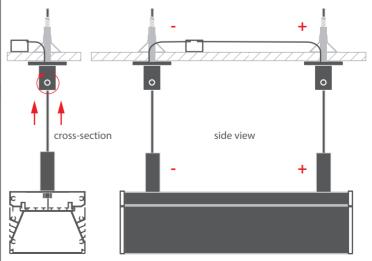



SEPOD and TESPO - suspended fixture mounting instructions 1. Rod - non-conductive (requires drop lead)


*If fully built fixtures are ordered and received from KLUS please skip to #3

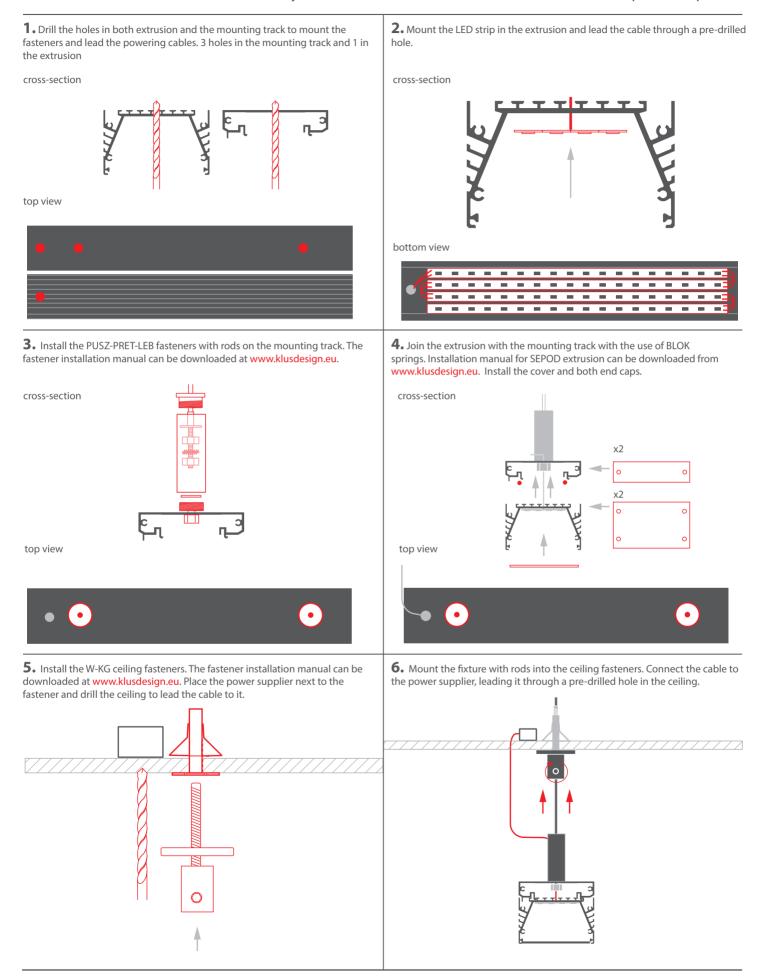



SEPOD and TESPO - suspended fixture mounting instructions 3. Wire - non-conductive (requires drop lead)


*If fully built fixtures are ordered and received from KLUS please skip to #3

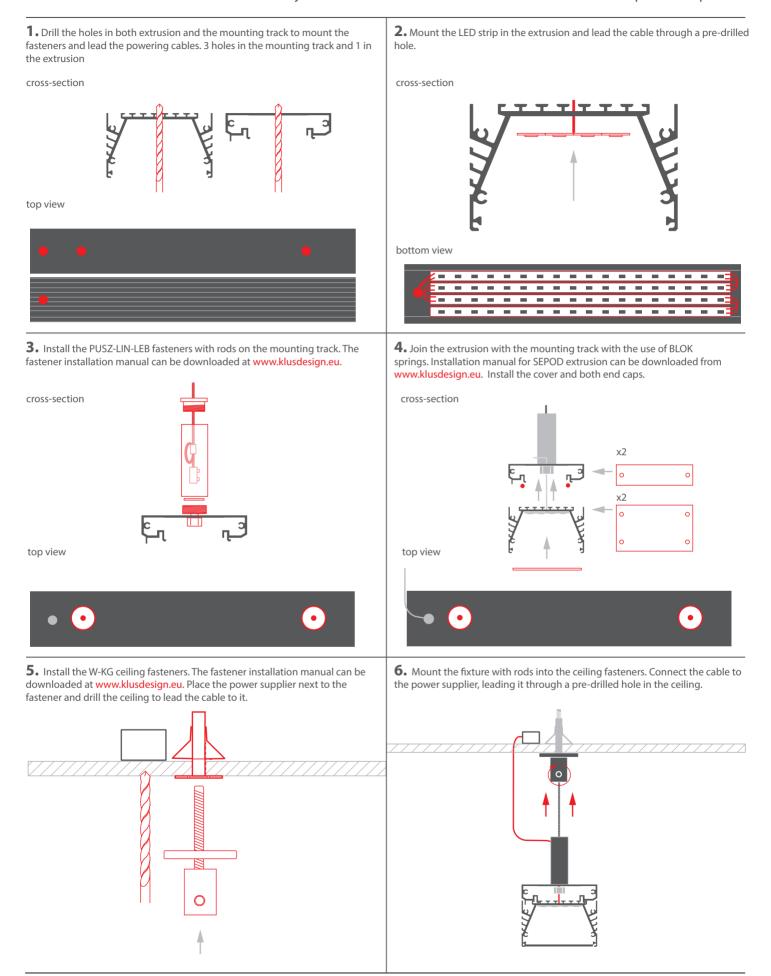





SEPOD and TESPO - suspended fixture mounting instructions 4. Wire - conductive driven power supply

*If fully built fixtures are ordered and received from KLUS please skip to #3

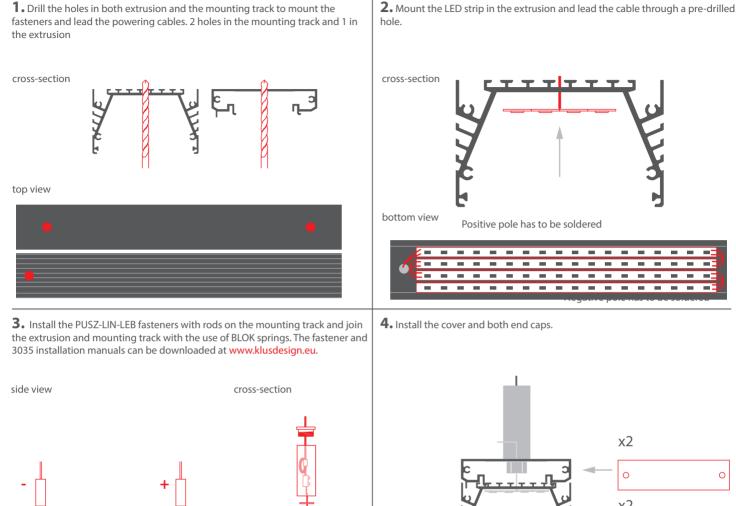

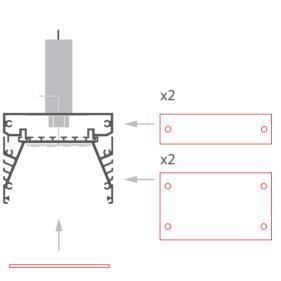

5. Install the W-KG-Z ceiling fasteners. The fastener installation manual can be downloaded at www.klusdesign.eu. Connect the cables, each for the single power pole to the fasteners. The cables should go through a pre-drilled hole just under the masking cover of the fastener.

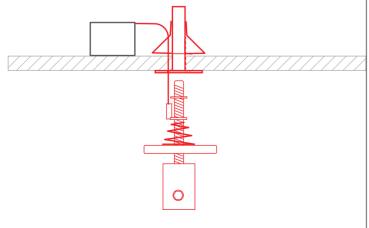

6. Mount the fixture with rods into the ceiling fasteners. Connect the cable to the power supplier, leading it through a pre-drilled hole in the ceiling.

